



Model	o2 harness color coding		
	Signal	+12	Ground
<b>Chevrolet</b>			
<b>Camaro</b>	PPL	PNK	TAN
<b>Cavalier</b>	PPL/WHT	BRN	TAN/WHT
<b>Covette</b>	PPL	BRN	TAN
<b>C1500</b>	PPL	PNK	TAN
<b>S10</b>	PPL/WHT	BRN	TAN/WHT
<b>Oldsmobile</b>			
<b>Cutlass</b>	PPL/WHT	BRN	TAN/WHT
<b>Pontiac</b>			
<b>Bonneville</b>	PPL/WHT	BRN	TAN/WHT
<b>Firebird</b>	PPL	PNK	TAN
<b>Grand AM</b>	PPL/WHT	BRN	TAN/WHT

### CAR WIRING

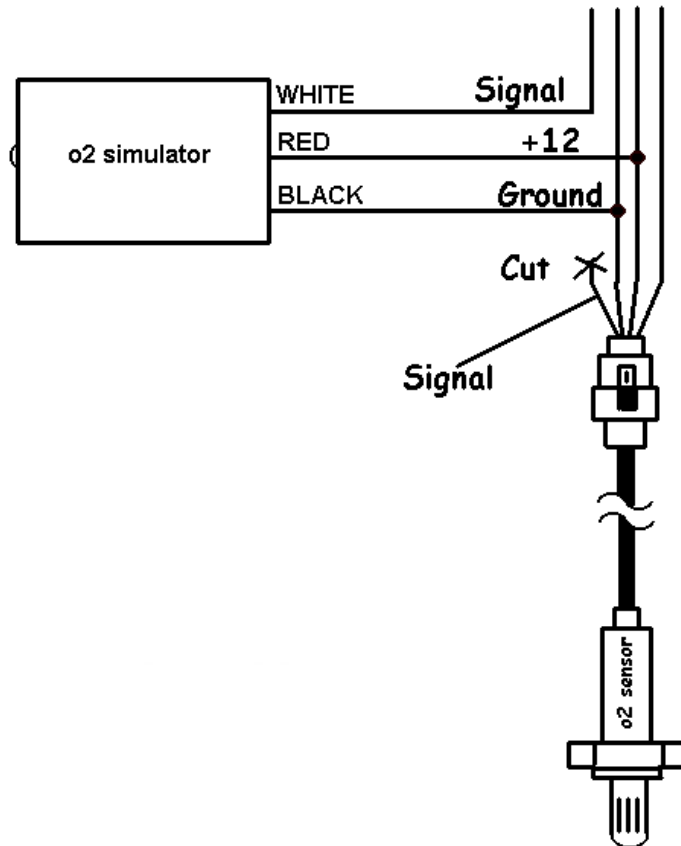

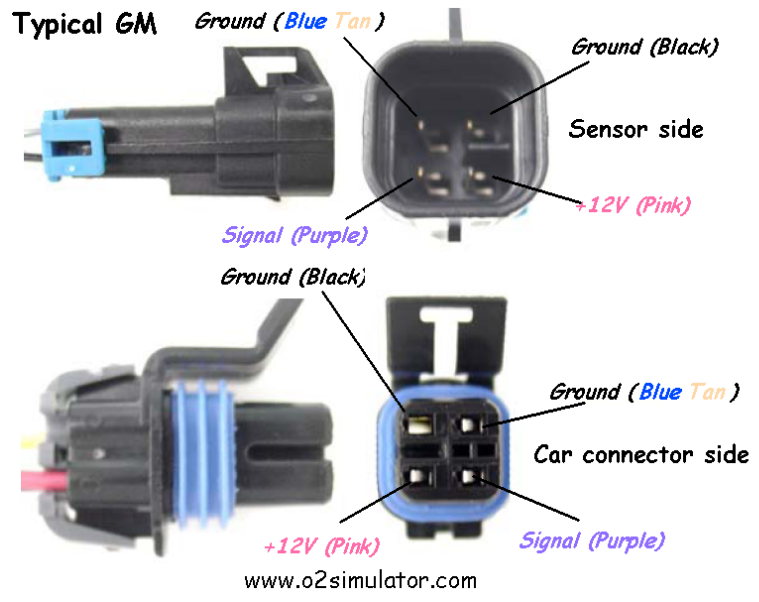

www.o2simulator.com